

SINGLE PHASE SERVO PARAMETER SETTING

DISPLAY SHOW

I/P V	O/P V	AMP
245	230	1

Press **ENTER** Button for 10 sec display show

OUT PUT VOLTAGE 230 V

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

REG VOLT 2 V

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

ON DELAY 5 SEC

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

O L TIME 5 SEC

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

H / L TIME 2 SEC

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

IN PUT LOW 155 V

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

IN PUT HIGH 315 V

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

OUT PUT LOW 200 V

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

OUT PUT HIGH 260 V

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

O L AMP 28

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

BUZZER ON / OFF

For increase and decrease VALUE use **UP** and **DOWN** key than press Press **ENTER** button for setting next parameter

SERIAL NO. 0

FOR SAVING PARAMETERS PRESS **RESET BOTTON** PARAMETERS SAVED AUTOMATICALLY IN THE MENU